

HT-2212 Pro/PB2200 Pro JUMPER SETTING

- **JP1 : 12V DC SUPPLY SELECT FOR CRT**
 - Short : 12V DC
 - Open : AC

- **JP2 : SOFTWARE AWARENESS OF UPS STATUS**
 - Pin 1-2 Short : Normal (DCD signal)
 - Pin 2-3 Short : Detect UPS status

- **JP5 : LAN FUNCTION SELECT**
 - Short : Enable
 - Open : Disable

- **JP6 : PS2 MOUSE LOOP BACK**
 - No PS/2 Touch Controller : Pin 1-2 Short, Pin 3-4 Short
 - Through PS/2 Touch Controller : All Open

- **JP7 : COM1 Pin1/Pin9 CONNECTED SETTING**
 - Pin 1-3 Short : COM1 Pin9 connected to 5V
 - Pin 3-5 Short : COM1 Pin9 connected as RI
 - Pin 2-4 Short : COM1 Pin1 connected to 12V
 - Pin 4-6 Short : COM1 Pin1 connected as DCD

- **JP8 : CMOS DATA CONTROL**
 - Pin 1-2 Short : Clear CMOS
 - Pin 2-3 Short : Normal

- **JP9 : COM2 Pin1/Pin9 CONNECTED SETTING**
 - Pin 1-3 Short : COM2 Pin9 connected to 5 V
 - Pin 3-5 Short : COM2 Pin9 connected as RI
 - Pin 2-4 Short : COM2 Pin1 connected to 12V
 - Pin 4-6 Short : COM2 Pin1 connected as DCD

