

## CR2204/CR2205 SWITCH SETTING

JP1-1	JP1-2	JP1-3	JP1-4	USB PID
<b>ON: RS232 TYPE</b> <b>OFF: USB TYPE</b>	ON	ON	ON	8
	OFF	OFF	OFF	7 (Default)
	OFF	OFF	ON	6
	OFF	ON	OFF	5
	OFF	ON	ON	4
	ON	OFF	OFF	3
	ON	OFF	ON	2
	ON	ON	OFF	1

