
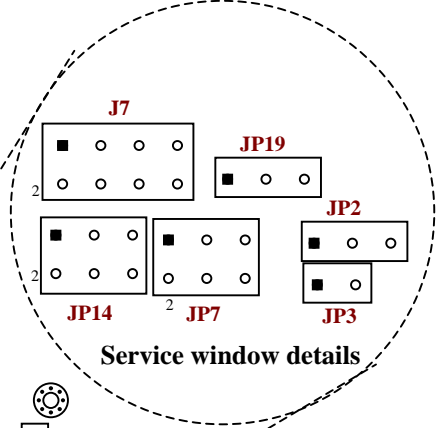


KS-6115 w/UPS JUMPER SETTING

- **JP2 : CMOS DATA CONTROL**
 - Pin 1-2 Short : Clear CMOS
 - Pin 2-3 Short : Normal
- **JP3 : 12V DC SUPPLY SELECT FOR CRT**
 - Short : 12V DC
 - Open : AC
- **JP4 : Reserved (COMPACT FLASH CARD SELECT)**
 - Pin 1-2 Short : SLAVE
 - Pin 2-3 Short : MASTER
- **JP5 : LAN FUNCTION SELECT**
 - Short : Enable
 - Open : Disable
- **JP7 : COM1/COM2 DC SUPPLY SELECT**
 - Pin 1-3 Short : COM1 Pin9 connected to 5 V DC
 - Pin 3-5 Short : COM1 Pin9 connected as RI
 - Pin 2-4 Short : COM2 Pin9 connected to 5 V DC
 - Pin 4-6 Short : COM2 Pin9 connected as RI
- **JP8 : 2.5" HDD Master/Slave Setting**
 - All Open : MASTER
- **JP19 : SOFTWARE AWARENESS OF UPS STATUS**
 - Pin 1-2 Short : Normal (DCD signal)
 - Pin 2-3 Short : Detect UPS status
- **J7 : USB Touch & OS Function Select**
 - Pin 1-2 Open : Linux or WinCE
 - Pin 1-2 Short : MS-DOS , Windows OS. (win98 , win 2000 ,win XP)
 - Pin 3-4 Open : Fujitsu Touch panel
 - Pin 3-4 Short : Elo Touch panel
 - Pin 5-6 Open : Linux ,WinCE ,Windows OS. (win98 , win 2000 ,win XP)
 - Pin 5-6 Short : MS-DOS

KS-6115 COMPONENT SIDE

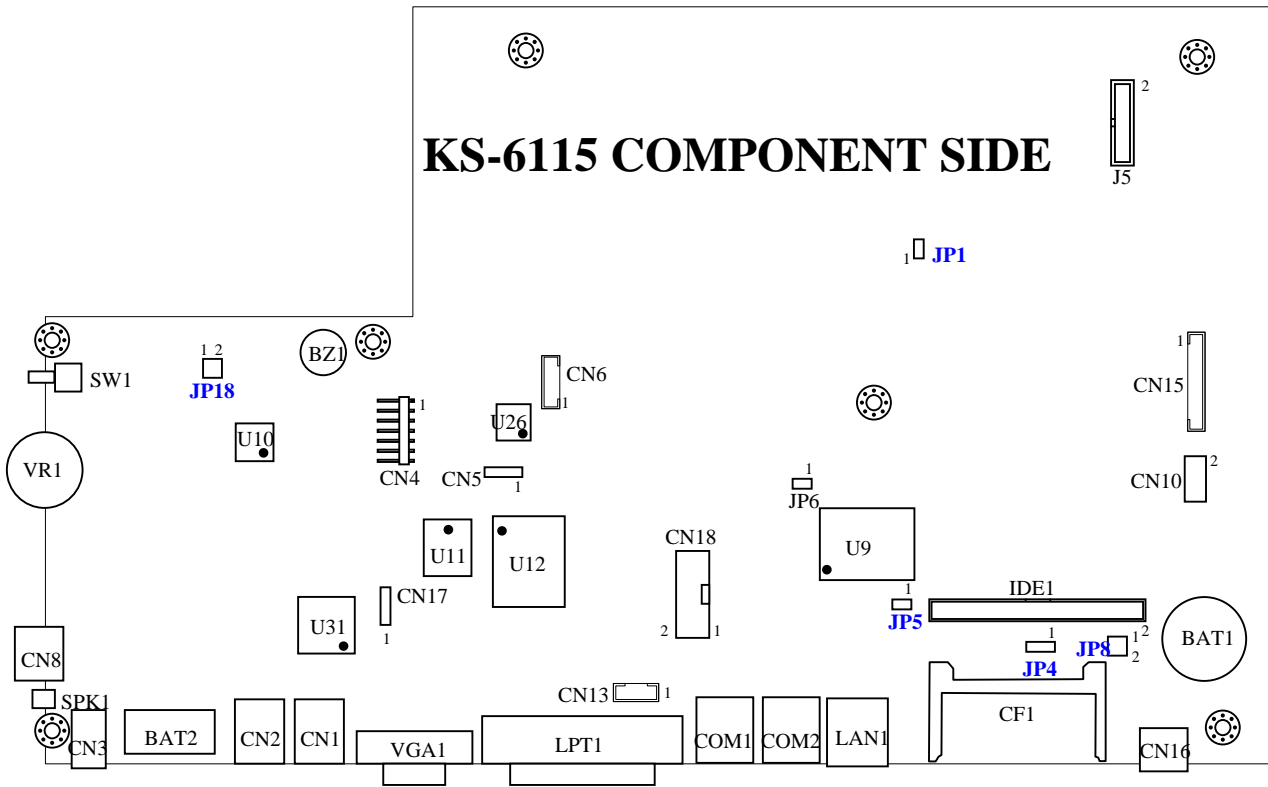

KS-6115 SOLDER SIDE

