

KS-6615/6617 JUMPER SETTING

- **JP1 : CMOS DATA CONTROL**
 - Pin 1-2 Short : Normal
 - Pin 2-3 Short : clear CMOS
- **JP2 : LCD PANEL POWER SELECT**
 - Pin 1-2 Short : 3.3V 15" LCD PANEL
 - Pin 2-3 Short : 5V 17" LCD PANEL
- **JP3 : 12V DC SUPPLY SELECT FOR CRT**
 - Short : 12V DC
 - Open : AC
- **JP4 : LAN FUNCTION SELECT**
 - Short : Enable
 - Open : Disable
- **JP5 : 2.5" HDD Master/Saver Setting**
 - Open : Reserved
- **JP6 : UPS STATUS SELECT**
 - Pin 1-2 Short : COM1 Pin1 connected as DCD
 - Open : Disable Pin 2-3 Short : UPS Detect
- **JP7 : COM1/COM2 DC SUPPLY SELECT**
 - Pin 1-3 Short : COM1 Pin9 connected to 5 V DC
 - Pin 3-5 Short : COM1 Pin9 connected as RI
 - Pin 2-4 Short : COM2 Pin9 connected to 5 V DC
 - Pin 4-6 Short : COM2 Pin9 connected as RI
- **JP9 : COM3/COM4 DC SUPPLY SELECT**
 - Pin 1-3 Short : COM3 Pin9 connected to 5 V DC
 - Pin 3-5 Short : COM3 Pin9 connected as RI
 - Pin 2-4 Short : COM4 Pin9 connected to 5 V DC
 - Pin 4-6 Short : COM4 Pin9 connected as RI
- **JP11 : USB TOUCH & OS FUNCTION SELECT**
 - Pin 1-2 Open : Linux or WinCE
 - Pin 1-2 Short : MS-DOS , Windows OS. (win98 , win 2000 ,win XP)
 - Pin 3-4 Open : Fujitsu Touch panel
 - Pin 3-4 Short : ELO or OEM Touch panel
 - Pin 5-6 Open : Linux ,WinCE ,Windows OS. (win98 , win 2000 ,win XP)
 - Pin 5-6 Short : MS-DOS

