

TP5800 Pro JUMPER SETTING

- **JP2 : TOUCH SIGNAL SELECT**
 - IR or RS232 TOUCH : Pin 1-3 , 2-4 Short
 - USB or NO TOUCH : Pin 3-5 , 4-6 Short
- **JP3 : PS2 MOUSE SIGNAL LOOP**
 - Direct Loopback : Pin 1-2 , 3-4 Short
 - Through Riser Card : Pin 1-2 , 3-4 OPEN
- **JP5 . JP6 : RIGHT AND LEFT LINE OUT**
 - JP5(2)-JP6(2) , JP5(3)-JP6(3) Short : Mono Amplifier Out
 - JP5(1-2) , JP6(1-2) Short : Stereo Line Out
- **JP7 : SINGLE VOLUME OUTPUT FOR AMP**
 - Pin 1-2 Short : NO VOLUME
 - Pin 2-3 Short : Volume output for AMP
- **JP9 : LAN FUNCTION SELECT**
 - Short : Enable
 - Open : Disable
- **JP10 : CMOS DATA CONTROL**
 - Pin 1-2 Short : Clear CMOS
 - Pin 2-3 Short : Normal
- **JP11 : COM PORT DC SUPPLY SELECT**
 - Pin 1-3 Short : COM1 Pin9 connected to 5V
 - Pin 3-5 Short : COM1 Pin9 connected as RI
 - Pin 2-4 Short : COM2 Pin9 connected to 5 V
 - Pin 4-6 Short : COM2 Pin9 connected as RI
- **JP12 : 12V DC SUPPLY SELECT FOR CRT**
 - Short : 12V DC
 - Open : AC
- **JP13 : SOFTWARE AWARENESS OF UPS STATUS**
 - Pin 1-2 Short : Normal (DCD signal)
 - Pin 2-3 Short : Detect UPS status

