

KS – 6115 / KS – 6115 UPS Fan Free Touch Terminal w/ Slim Base User's Manual

POSIFLEX



FCC Notes:

Rev. A1

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions manual, may cause interference to radio communications. It has been tested and found to comply with limits for a Class A digital device pursuant to subpart J of Part 15 of FCC Rules, which are designed to provide reasonable protection against interference when operated in a commercial environment. Operation of this equipment in a residential area is likely to cause interference in which case the user at his own expense will be required to take whatever measures to correct the interference.

Warranty Limits:

Warranty terminates automatically when any person other than the authorized technicians opens the machine. The user should consult his/her dealer for the problem happened. Warranty voids if the user does not follow the instructions in application of this merchandise. The manufacturer is by no means responsible for any damage or hazard caused by improper application.

About This Manual:

Posiflex Technologies, Inc. has made every effort for the accuracy of the content in this manual. However, Posiflex Technologies, Inc. will assume no liability for any technical inaccuracies or editorial or other errors or omissions contained herein, nor for direct, indirect, incidental, consequential or otherwise damages, including without limitation loss of data or profits, resulting from furnishing, performance, or use of this material.

This information is provided “as is” and Posiflex Technologies, Inc. expressly disclaims any warranties, expressed, implied or statutory, including without limitation implied warranties of merchantability or fitness for particular purpose, good title and against infringement.

The information in this manual contains only essential hardware concerns for general user and is subject to change without notice. Posiflex Technologies, Inc. reserves the right to alter product designs, layouts or drivers without notification. The system integrator shall provide applicative notices and arrangement for special options utilizing this product. The user may find the most up to date information of the hardware from:

<http://www.posiflex.com> or <http://www.posiflex.com.tw> or <http://www.posiflexusa.com>

All data should be backed-up prior to the installation of any drive unit or storage peripheral. Posiflex Technologies, Inc. will not be responsible for any loss of data resulting from the use, disuse or misuse of this or any other Posiflex product.

All rights are strictly reserved. No part of this documentation may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, or otherwise, without prior express written consent from Posiflex Technologies, Inc. the publisher of this documentation.

© **Copyright Posiflex Technologies, Inc. 2007**

All brand and product names and trademarks are the property of their respective holders.

P/N: 16520901030

Part 1

ALERT TO OUR HONORABLE CUSTOMERS:

- Please always read thoroughly all the instructions and documents delivered with the product before you do anything about it. Don't take any premature action before you have a full understanding of the consequences.
- This product contains inside a Lithium battery. Please always follow local environmental protection laws / regulations for disposal of used batteries and always replace only with battery of same type.
- If you have an UPS battery installed in the product:
 - ✧ Temperature above **40°C must be strictly avoided** as it could cause termination of battery life and unexpected result even if the battery is not in work.
 - ✧ **Do not** power off the system just by shutting off the AC power leaving the battery supporting the whole system till completely exhausted. **Repeatedly using it up or improper maintenance reduces the battery life dramatically.**
 - ✧ Always fully recharge the battery at least once every 3 months if the battery is not connected.
 - ✧ Always **disconnect the UPS battery** from the system if the system is to be left OFF for more than **72 hours** to prevent possible damage. Only connect the UPS battery back right before you are going to re-power on the system.
 - ✧ Replace the battery as soon as the monitoring software indicates the battery is out of service. Attempt to recharge a dead battery is **dangerous!**
 - ✧ A separate battery monitor is not required for this series.

DAILY MAINTENANCE GUIDE

For regular cleaning of the KS systems, please use only soft haired brush or dry soft cloth. You may use moist soft cloth to remove stains when necessary. Apply only proper amount of mild neutral detergent for obstinate stains. Please note that never use Acryl dissolving solvent or Polycarbonate dissolving solvent. You may apply ammonia-based glass cleaner only on the screen surface.


CAUTION

**Risk Of Explosion If Battery Is Replaced By An Incorrect Type
Dispose Of Used Batteries According To Local Regulations**


INTRODUCTION

PRODUCT PICTURES


Front Views

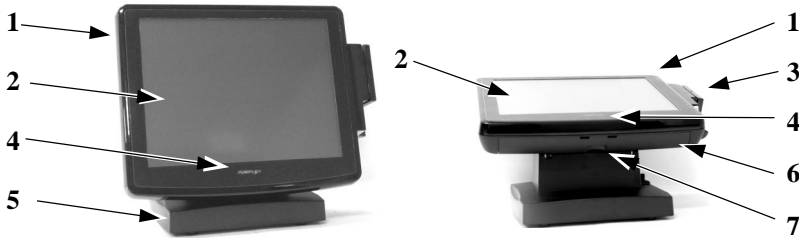


Side Views

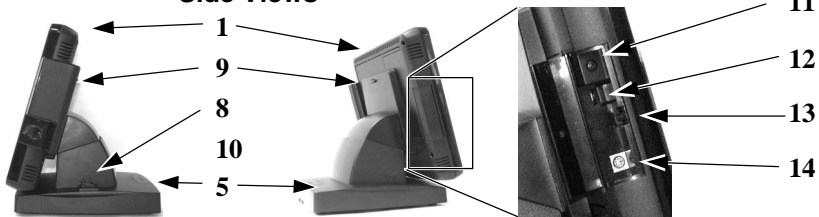

Rear View

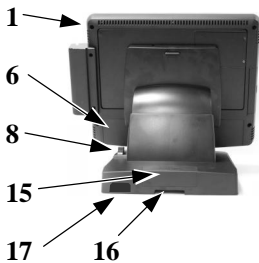

Bottom View

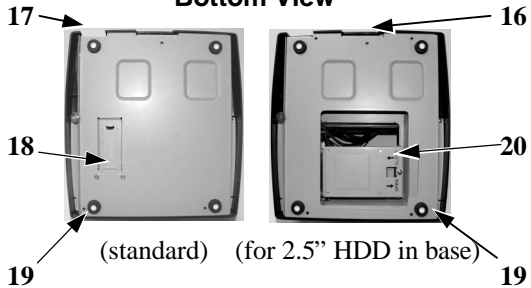

PARTS IDENTIFICATION

1. Main unit
2. Touch panel / LCD panel
3. Optional side mount kit e.g. SD-400
4. Power indicator / Logo
5. Slim base stand
6. Cable cover
7. Removal hollow in cable cover
8. Lock / release lever for tilt angle adjust

9. Lock / release button for main unit detach
10. Touch open cover
11. Power switch
12. Brightness adjust thumb wheel
13. Touch open door latch
14. PS/2 KB port
15. Rear connect cover
16. Cable exit
17. 2nd cable exit
18. Auxiliary cable exit
19. Rubber feet
20. Option 2.5" HDD bracket

PRODUCT FEATURES

Standard Features:

- a) CPU: AMD LX-700
- b) Fan free structure with metal main unit casing for harsh environment
- c) Data storage device: CF memory card (default) or optional IDE HDD 3.5" or 2.5" 40 GB in base stand or optional IDE HDD 2.5" 40 GB in main unit. (only one device allowed)
- d) An advanced slim base design. The slim base supports 2nd LCD display or pole mount customer display in desktop mount application, storage room for HDD and optional UPS battery (for KS-6115UPS). Also possible to be without base but wall mount bracket for wall mount application.
- e) Support WinCE, WEPOS and Linux environment
- f) High quality 15" TFT active matrix LCD panel
- g) Brightness control by hardware
- h) **Vertical type LCD panel with easy tilt** angle adjustment from 15° to 72.5°
- i) Durable resistive type (leading edge Infra Red type optional) touch panel that endures 35 million touches min. at same spot
- j) Spill proof water resistant structure allowing easy cleaning
- k) Easy maintenance construction
- l) Various I/O ports supported, including:
 1. one PS/2 KB port (inside touch-open cover)
 2. 2 serial ports with capability for +5V DC support in form of 10 pin RJ45 jacks with conversion cables for system revision before "G" and in form of DB9 connectors for system revision "G" and later
 3. one parallel port
 4. 4 standard USB ports

5. one proprietary USB port for optional side mount kit (e.g. SD-400)
 6. one LAN port 10/100 base T Ethernet with LAN status indicators on jack (green for link, orange for data transmission), upgradeable to 1 Gbps
 7. one external VGA monitor port
 8. one 5.5/2.5 Ø coaxial type DC 12 V power input connector
 9. one CF card reader slot or optional IDE + power connectors for HDD in base
 10. one UPS battery connector (for KS-6115UPS)
- m) **Touch control functions:** left/right button, double click, drag & draw
 - n) VGA memory size shared from system memory (8 ~ 254 MB)
 - o) Support high performance **DDR DRAM** with maximum memory size **1GB in one module**
 - p) Integrated structure for various side mount upgrade kit
 - q) Built-in internal speaker with 2 W audio amplifier
 - r) **Built-in UPS function** (for KS-6115UPS) to support the system from intermittent power failure (battery itself is an option)
 - s) **Accidental power off protection** – The power switch is safely located inside a push-open cover. It can be defined as a “ON” switch only through software command (for KS-6115UPS)
 - t) **Preconditioned power up function** – by alarm clock

Option Items:

Note: The underlined option items in the following list must be set prior to shipment from the factory. The rest items can be set by the dealers.


- a) DDR SDRAM memory expansion up to 1GB
- b) Integrated side mount upgrade kit:
 - ✧ SD400: MSR, fingerprint reader and audio ports (Mic. in / line out)
 - ✧ SD600: iButton reader, MSR and audio ports (Mic. in / line out)
 - ✧ SD700: Fingerprint reader and bar code card reader
 - ✧ KP300: Programmable keypad, MSR, smart card reader and Audio ports (Mic. in / line out)
- c) Integrated base mount device choice among: PD2501 or PD2602 VFD pole display or PD305 low profile LCD customer display or PD306 LCD pole display or PD7622 graphic LCD customer display or 12.1” 2nd LCD panel monitor LM-6201 or 15” 2nd LCD monitor LM-6301
- d) 3.5” or 2.5” HDD kit in base or 2.5” HDD kit in main unit
- e) UPS battery in base (for KS-6115UPS)
- f) Preload OS
- g) Wall mount kit: WB-6000, WB-6300, WB-6600

INSTALLATION GUIDES

CAUTION: Before any installation or cable connection to the set, please always make certain that the system is turned off and the external power source to the set is removed to prevent electric hazard! Never touch any metal pin in the connectors or circuits to avoid high voltage hazard or electrostatic discharge damage unless the operator is well grounded. Failure to do the above will void the product warranty!

OPENING CABLE COVER

Please follow steps A to C sequentially with reference to pictures below to remove the cable cover for the slim base models.

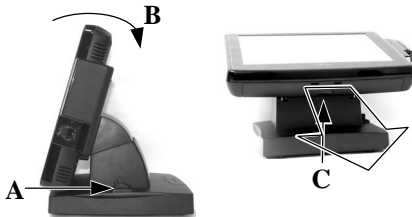

Step A: Push lock/release lever for tilt angle adjust backward

Step B: Turn panel to most horizontal position


Step C: Pull at the removal hollow toward the user

DISCONNECTING ALL CABLES

After removal of the cable cover, the connector area will be accessible then. Please **first note orientations of every existing cable connection** and then disconnect every cable properly before separating the main unit from the adjustable base stand assembly. Please note that the click lock spring has to be pressed down prior to pulling out the connector such as the LAN port. Please also note that the fixing screws have to be loosened free prior to disconnection such as the LPT port. Please **always hold the connector head** instead of pulling on the cable wire when disconnecting any connector. Failure to do this could damage the cable and jack that is considered as an **artificial destruction**. **Damages due to incorrect disconnection operation are not covered by product warranty!**

SEPARATING MAIN UNIT

In order to settle the touch terminal properly in a point of sale system, all the cable connections have to be routed through its base. Therefore, please observe the procedures from A to C below to separate the main unit from the slim base stand assembly after all cables in cable cover disconnected.

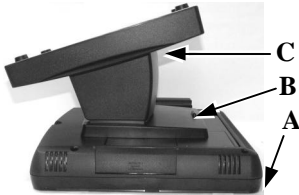


Step A: Prepare a soft clean flat surface, such as a piece of cloth on the desk to seat and protect the front surface of main unit

Step B: Press the Lock/Release button for main unit detach and meantime ...


Step C: Slide the base stand assembly to left to separate the main unit from base stand

OPENING STAND ASSEMBLY

Take the adjustable stand assembly and turn it up side down to show the bottom of the base. Remove the bottom plate fixing screw and push the bottom plate aside as in left picture below for slim base to open. The inside will look like the right picture below with each numbered items described further below. However, there could be some variation to the contents inside depending on what option items actually installed. Please note that for optional 2.5" HDD in base the base bottom looks different from the picture with a HDD maintenance window instead of the auxiliary cable exit.

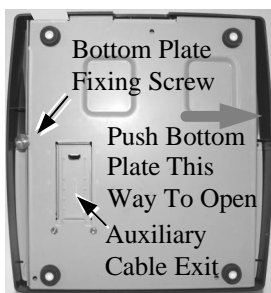

Slim base bottom

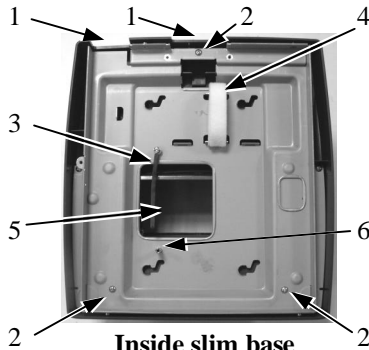

Inside slim base

1. Cable Exit for External Connections
2. Base Box Screw
3. Cable Tie

4. Velcro Strap for UPS Battery (for KS-6115UPS)
5. Cable Passage To Main Unit For Desktop Mount Application
6. HDD Bracket Fixing Screw

CABLE PASSAGE

Please route all cables through the cable passage to main unit in desktop mount application. Hold them together with the cable tie. Pass all cables (but those for HDD and UPS battery for KS-6115UPS) through the cable exit to external connections. For desktop mount application, when cable connection through a hole on desktop underneath the system is required, please slide open the auxiliary cable exit on bottom plate and route all external connections through this auxiliary exit. Then fix back the bottom plate if there is no option unit to install.

INSTALLING UPS BATTERY

The optional UPS battery for KS-6115UPS is delivered in the carton if it is ordered. Please place the UPS battery in the direction shown in the right picture and use the Velcro strap through the 2 standing slits on base box to fix the battery in position firmly. Route the battery connection cable through the cable passage to the battery connector on the main unit. Please pay particular attention to the environment requirements for UPS battery in next chapter “USING THE TOUCH POS”.




BASE MOUNT UPGRADE KIT

On rear edge of the stand assembly for desktop mount application, there is a rear connect cover. Either a 2nd LCD display panel option 12” LM-6201 or 15” LM-6301 or a customer display option among PD-2501, PD-2602, PD-305, PD-306, PD-306U or PD-7622 can be installed here after removing this cover.




Please note that there could be some restrictions to the tilt angle range for the main unit due to existence of base mount upgrade kit if mounted. Investigation for the acceptability of such kind of restrictions must be taken before decision to install a base mount upgrade kit.

To remove the rear connect cover in slim base please refer to the inside view of the base unit at right and use a flat head screwdriver to pick the plastic hook plate of the rear connect cover from inside behind the area with Velcro strap.

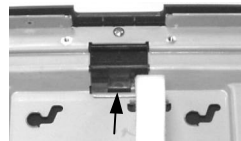

12" 2nd LCD Panel Or Customer Display

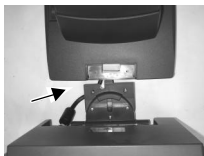


Fit the joint base of PD-2501, PD-2602, PD-305, PD-306/U, PD-7622 or LM-6101 to the rear connect cover opening. Please route the interface cable through the normal cable exit (under the joint base) as in the 2 pictures. Fit 2 screws **through**



washers to hold the joint tight. For low profile customer display PD-305, the display is right on the joint base without pole. Remember to enable the +5 V DC supply in the COM port of the main unit for PD-2501, PD-2602, PD-305, PD-306 or PD-7622 or the +12 V DC in VGA port for LM-6101. PD-306U will be powered through the USB port without specific setting.


15" 2nd LCD Panel

A bracket kit including a steel interface bracket will be provided with the 15" 2nd LCD panel LM-6301. Please follow the accompanying installation guide to mount the interface bracket and fix it to the rear connect area of the system as in the right picture. Route the VGA cable through the cable exit of the base stand to the main unit. Connect its attached power adaptor to the power source.

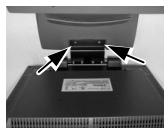

ROUTING THE CABLES

Place all the cables required for connections to the main unit through the front part inside the stand assembly. Be sure not to damage any cable during this operation. The joint of the DB9 RS232 cable of the external devices and the RS232 conversion cable if used is most recommended to be kept inside the base stand assembly for system revision before "G".

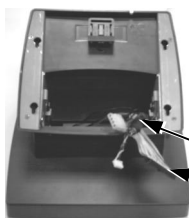


Route Cables through Front Part
Connect this End to Main Unit

Now, turn the adjustable stand assembly back to normal orientation and arrange all cables to come out of the area for mounting main unit from the lower front edge for ease of later operation..

PREPARING THE MAIN UNIT


On the back of the main unit, there is a service window among the 4 matching pegs. Remove the service window lock screw to find several jumpers. The jumpers in this window are designated for VGA port and COM port power supply function. Please consult your dealer for technical support on setup of

these jumpers as shown in pictures below. Please note that only those qualified technicians may adjust in this window with information from Posiflex and the contents in the service window may change without notice as time develops.

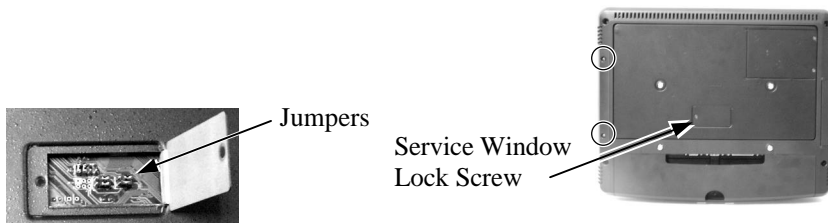


SIDE MOUNT UPGRADE KIT

Remove the 2 circled screws in the above right picture to remove the cover for side mount upgrade kit. Take out the cable inside this cover as circled in the right picture and then connect it to connector inside the side mount upgrade kit like SD400 as arrowed in left part of the same picture. Gently arrange the excessive length of this cable back in the hole and screw-fit it back to the position originally occupied by the cover. Please reserve the cover if there is chance to have the side mount kit removed in the future.

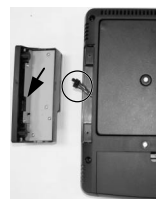

DESKTOP MOUNTING

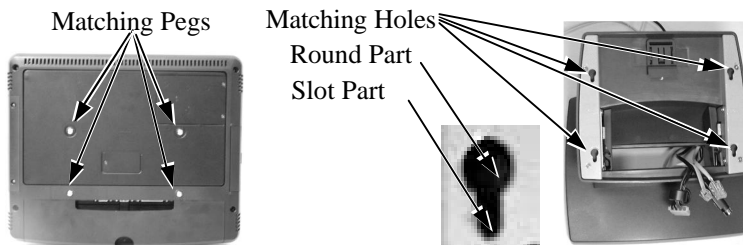

Match the matching pegs on the back of the main unit against the matching holes on the stand base assembly. First aim the matching pegs toward the upper round part of the hole and make sure that all pegs are inside the holes. Then slide the main unit down to move the pegs into the lower slot part of the holes till it clicks. Note that all the cables come out of the stand from the lower edge shouldn't get trapped by this mounting operation. If later on you want to remove the main unit from the stand, you'll have to press down the lock/release button on back of the stand at the time lifting the main unit.

For desk top/counter application, the body of KS-6115 occupies a

space of 378 mm wide, 302 to 290 mm deep and 258 to 354 mm high per main unit tilt angle.

WALL MOUNTING

The wall mount model is delivered without any base but with a wall mount kit. Please follow the installation guide that comes with the wall mount bracket to fix the wall mount bracket on wall and then hang the main unit with the matching pegs into the matching holes on wall mount bracket.

Please note that since there is no base for the wall mount model there can be no base installed device nor base mount kit. Consequently, the mass storage device for KS-6115 series in wall mount application has to be either the CF card or the 2.5" HDD in main unit unless the type of wall mount kit is checked and found to fit the usage.

The area required for wall mount application is determined by the main unit dimensions and is 378 mm in width and 312 mm in height.

CONNECTING CABLES

To re-assemble the main unit with stand assembly for operation, please connect all required cables to the appropriate connectors. Please make sure that each connector is connected to the correct port with the correct orientation. **Damages due to incorrect connection or orientation are not covered by product warranty!**

Some connectors like the LAN connector and the COM ports for system revision before "G" have to be gently inserted until a click is heard. The 2 COM ports for system revision before "G" are of 10 pin RJ45 format and the DB9 to RJ45 **conversion cables delivered with the system only** should be used for regular RS232 cable to connect through. Please **never use any other cable** of similar structure but for other models, because it may not only fail to work but also cause unexpected damages. It is recommended that connectors such as the external VGA and LPT connector and COM ports for system revision since "G" be screwed into place once seated.

Adjust the slack of each cable and close the cable cover. Re-adjust the tilt angle of the screen for best viewing.

Connect the cables to appropriate external devices through the cable exit at the bottom of stand assembly. Please make sure that each connector has to be connected to the right device in the right way.

CAUTION: On doing any insertion or extraction of any connector, please always hold the connector head itself instead of pulling on the cable wire. Failure to do this could damage the cable and jack that is considered as an artificial destruction and is not covered by the warranty.

OPERATING SYSTEM RECOVERY

For KS systems with operating system in the Compact Flash Card, once the Compact Flash is damaged for any reason, the thin client may fail to boot. **A bootable new Compact Flash Card will be required to have the workstation back to work.** Please follow instructions given by the System Integrator to deal with situations like that. One more advice for CF Card application is that in spite of the fact that it is used in the way like an ordinary HDD, usual utilities such as **FDISK.EXE or FORMAT.COM shall never be used on CF Card** otherwise the boot sector of operating system itself may be damaged and causing the CF Card no longer bootable.

For KS systems preloaded with Windows XP Pro or WEPOS on HDD, Posiflex provides recovery CD or DVD delivered with the touch terminal for the preloaded operating system. The System Integrator shall take care of software restoration after OS recovered. A Posiflex supplied USB interface CDROM or COMBO drive will be required for such action. Other brand CDROM or COMBO drive may require its specific driver different from what supported in the recovery CD or DVD.

Please use the recovery CD or DVD in rescue operation only. Using it otherwise may wipe out whatever stored in the HDD! All upgrade devices drivers needed for manual installation in usual way are available in the subfolder “\drivers” in OS recovered HDD and the latest versions of these required drivers will be available on our web: <http://www.posiflex.com.tw>. Then follow instructions from your system integrator for software recovery.

OPERATING SYSTEM INSTALLATION

This product is a highly professionalized equipment. The installation of an OS into a machine without any preloaded OS could constitute major difficulty for average user or obstacle by possibly unintentional negligence even for PC veterans to accomplish such a task. Therefore, OS installation into a system without preloaded OS is highly discouraged. Posiflex Technologies, Inc. shall not be responsible for any technical support to questions arisen due to non-preloaded OS.

USING THE TOUCH TERMINAL

APPLICATION ENVIRONMENT

It is **very** important that you check the following operational guidelines:

Ventilation

This terminal must **NOT** be operated in an environment with restricted ventilation. There must be at least 25 mm air clearance around any top or side ventilation holes with a free flow of air around the unit at **ALL** times for the installation.

Operating Environment

The equipment must not be operated or stored in extremes of both temperature and humidity/moisture. (Operating range 5°C to 40°C and up to 80% humidity – non condensing, max. wet bulb 26°C)

UPS Battery (option for KS-6115UPS only)

General care:

The UPS battery is consumables beyond product warranty. Please definitely observe the alerts in beginning of this manual. If the equipment is to be powered off for more than few days, please always **disconnect** the battery from the system. Reconnect it and turn on the system to recharge the battery for 1 ~ 2 hours every 3 months for temperature lower than 30°C. Recharge for 1 ~ 2 hours every month for temperature over 30°C. Temperature above **40°C must be strictly avoided** as it could cause termination of battery life and unexpected result even if the battery is not in work. The UPS battery can support basically the data preservation and smooth running of the system during intermittent or few minutes (30 ~ 60 min. depending on loading and battery condition) power failure.

Battery replacement:

In the preloaded OS in HDD for a KS system, there is a built in utility Power Manager that will interface the UPS battery monitor status with user. When battery monitor disables the battery charging as designed while the UPS function of the system is originally enabled, in other words the UPS battery is found out of order if actually installed, there will be a popup message as the picture at right asking the user to agree disabling the UPS function. The system will operate under deactivated UPS function no matter agreed or not. However, the monitoring goes on and the popup message will come back on next system power up boot if not agreed. In any case, please replace the used up UPS battery at power off if the battery is well connected there but found inoperable by such messages.



Emergency treatment:

The battery is constructed maintenance free and leakproof. It is well protected in KS system as long as the ambient temperature remains below 30°C and the ventilation of the KS system remains free. However, should any accident happen and the sulfuric acid from the battery spills on skin or clothing, wash immediately with water. If the acid comes in contact with eyes, rinse eyes with large amount of clean water and see a doctor immediately. A larger external battery may be connected to give an extended operation. Please check your dealer about this capability when required.

WARNING:

If there are any signs of over charging or leakage of electrolyte please contact your dealer immediately

Power Supply


The operating voltage range of the power adaptor should cover the local power supply for proper operation. The power cable, the power outlet and any power fusing arrangements must conform to local safety regulations.

Please **never do any connection / disconnection** when system is still powered on. **Please always keep the external power adaptor in a free air circulation.**

POWER ON/OFF

Touch Open Cover

A gentle tap on the touch open cover at left side of the main unit will open the cover and show the power switch, thumb wheel knob for brightness adjust and a PS/2 keyboard jack. It is preferable to keep this door closed through daily operation. Please note that some operating systems may inhibit the use of the PS/2 keyboard port if there is no device connected during boot up.

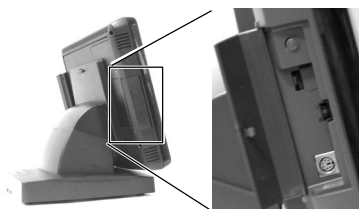

There must always be at least 10 seconds waiting before switching on again once the system is powered off successfully.

Power Indicator



The power status of the system is indicated by the backlight of the logo. When the logo lights in green, the AC power is standby for the system to turn on. The logo turns to blue when the system is powered on.

The relationship between the indicator status and other conditions is summarized in following table:

Indicator Status	System Status	External Power	UPS Battery	Powering Up
Off	Off	Off	Not present	Not possible
Off	Off	Off	Present	Not allowed
Green	Off	On	No influence	Allowed
Blue	On	On	No influence	Not required
Blue/flash	On	Off	Activated	Not required
Green/rapid flash	On	Off	Running at low capacity	Not required

Hardware Power Switch

The power switch located in the touch open cover of the main unit is a tactile pushbutton switch. This switch controls the power on/off of the system. This switch turns the system on when pushed only when external power is present. This switch turns the system off when pushed again during power on status. However, if the system hangs due to any reason such as software resource conflict a simple push on the switch may fail to turn off the power. In this case, please utilize the **forced power off feature** by pressing the switch and holding for within 10 seconds. In case the turmoil is so vigorous that some hardware registers may be confused causing trouble for system restart or even this forced power off, please disconnect the UPS battery if installed and the AC power supply for few minutes. This may allow all hardware registers to reset.

This switch can also be programmed as an ON only switch for KS-6115UPS. That means, if the application program issues a command compliant with the KS series technical manual, this switch will always turn the system on when activated, but will not power off the system when pushed again (the forced power off feature will not work in this mode). When using this feature, please make sure that the software application has the ability to power off the machine. In preloaded Windows, “Posiflex Power Switch Manager” in “Posiflex Tools” in the Program Files helps managing these functions.

Software Support Features

The KS series provides a software power off command for application program maneuvers for KS-6115UPS. The KS also provides a specific means for the software to detect if the system is working on external or UPS battery power. Due to this feature, compatible software applications have the ability to change operating conditions when running on standard/backup power. The software programmer may take reference from the KS technical manual to apply such features.

Automatic Power On Control

The system may also turn on according to preset conditions for Alarm Clock Wake Up.

To utilize Alarm Clock Wake Up function, the user should enter the CMOS setup by pressing “Del” key at system boot up, choose for “Power Management Setup” and make the “Power-On by Alarm” enabled and select the condition for Alarm Clock Wake Up. Save the configuration and exit the CMOS setup program. The Preset Power On Control will then be ready.

When the KS system is turned off after a successful boot up, the preset automatic power on functions will keep monitoring for the preset conditions and turn on the system when the preset conditions are met.

Please note that if the KS system is improperly turned off before a complete boot up procedure, the above preset power on control functions will be disabled until next turning off after a complete boot up.

DISPLAY ISSUES

Main LCD Display

For best viewing result please set your display resolution at 1024 x 768 with high color.

In configuration of system memory, max. 254 MB can be shared as the video memory.

VGA Port

The VGA port in the KS system supports TM4115 touch monitor, LM6112 LCD monitor or TM7112 touch monitor if there is no base mount 2nd LCD display. This port supports only the mirror mode (identical image) dual display function. To support the DC power to these Posiflex monitor, use the DC adaptor to connect into the monitor (for TM-4115 / TM-7112) or its VGA cable (for LM-6112) or use Posiflex VGA + power cable and set an internal jumper in KS main unit to supply the required power through the VGA connector (for LM-6101). **Do not connect other monitor to this port before the power in this port is disabled.**

CUSTOMER DISPLAY

Please follow the instructions on the manual that comes along with the customer display when it is installed.

SERIAL PORTS – COM1/2

In KS system, there are 2 serial ports available. Both serial ports can supply a +5 V DC through pin 9 after proper jumper setting change. Both ports are standard RS232 serial ports after the conversion cables for system revision

before “G” or already standard RS232 serial ports without conversion cables for system revision since “G” as status at delivery.

When a serial Modem is to be used in KS system, it is most recommended to use COM2 port for this purpose. In this way any hardware resource conflict is eliminated.

SOUND PORTS

The audio port in KS system is arranged to have an internal audio speaker with maximum audio power of 2 W at lower left corner of the main unit but no direct access port in the main unit. The external access to audio ports can be found in the side mount option kit like SD-400 with a Microphone in and a stereo line out jacks at its bottom surface as circled in the right picture. The internal speaker will be automatically disconnected when a plug is inserted in the line output jack.



CF CARD

If the CF card is used for system data storage device, there should be no optional HDD installed due to compatibility concern. Please note that usual utilities such as **FDISK.EXE** or **FORMAT.COM** **must never be used on CF card or permanent damage can occur.**

TOUCH PANEL

All paragraphs below are applicable for models with touch panel only. The user of those models without touch panel can ignore them and consider this user’s manual ends here.

Mouse Emulation

The touch panel in KS system uses USB interface. When the touch driver is properly installed, this touch panel works exactly like a standard USB mouse. However, if the system is running under safe mode, most drivers are disabled in this mode and the touch panel calibration is therefore not guaranteed. It is recommended to use a standard USB mouse or keyboard in this mode.

All the below mentioned mouse emulation functions can be manipulated through relevant software. The system can give a beep and a click on the left button of a mouse at the point when the touch panel is touched. If the point touched is dragged across the screen surface, it works as the mouse drag and drop feature. If the point is touched, released and touched within a short time interval, it is double-clicking left button of the mouse. To obtain the effect like clicking on the right button of a mouse, touching any point on the screen surface after touching the right-click sticky button results as a click on the right button of the mouse at that point.

Posiflex USB Touch Manager

A program named “Posiflex USB Touch Manager” and a right-click sticky button tool in the program group “Posiflex USB Touch Tools” is installed in the preloaded Windows system with a USB interface touch panel controller. This program can also be obtained by download from the POSIFLEX web site.

POSIFLEX 

警告使用者 T314S4

這是甲類的資訊產品，在居住的環境中使用時，可能會造成射頻干擾，在這種情況下，使用者會被要求採取某些適當的對策。